



WILDCOUNTRY

HELMET

/

S P A R E P A R T S M A N U A L

REQUIRED TOOLS




HELMET PADDING

MODEL	CODE		COLOR	SIZE
PADDING KIT SESSION HELMET	40-0000010043	900	BLACK	S/M
	40-0000010043	900	BLACK	L/XL
PADDING KIT SYNCRO HELMET	40-0000010045	900	BLACK	UNI
PADDING KIT MOVEMENT HELMET	40-0000007004	900	BLACK	S/M
	40-0000007004	900	BLACK	L/XL

INCLUDED PARTS


40-0000010043 SESSION
HELMET PADDING

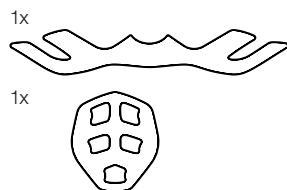

SIZE: **S/M - L/XL**


INCLUDED PARTS

40-0000010045 SYNCRO
HELMET PADDING

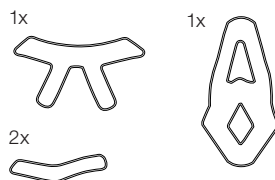


SIZE: **UNI**

REPLACE PADDING

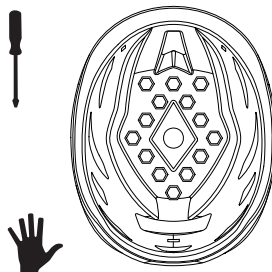

- 2** Grab the padding and pull it

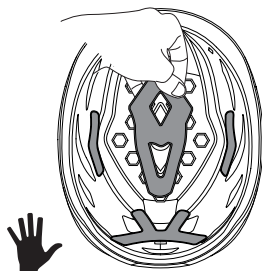

- 3** Push the new padding in place

